

PRODUCT SPECIFICATION:

Color Temperature	3000K±300K 5500K±500K 4200K±400K
CRI	>80Ra
Power input	DC12V/1A
Material	ABS+RUBBER
Luminous Flux	>450LM
Power	9W

Warranty Card

Applicable for:

- Since buying date, the user enjoys one year free repair services under normal use. After one year, will be charged according to each component part cost.
- In case change component part, will be charged according to our company's component part cost list.
- The following situations not free repair in Warranty period.
 - 1) Damage caused by natural earthquake, rat disaster, and unnormal use.
 - 2) Damage caused in transportation, fall, and improper storage.
 - 3) Consumable component, such as spare parts, batteries, light bulbs, etc.
 - 4) Warranty information record is not complete, no purchase date, no buying shop seal, etc.
 - 5) Featured using environment, such as humidity, sulfur area, high salty and the ship, etc, easy corrosion area.
 - 6) Using not according to the instructions.
 - 7) Special offer.
- When return to factory for repair, the user should make sure the LED lamp packed properly, to avoid any damage during transportation.
- Factory not responsible for the damages caused by the user themselves improper disassemble.

Important!


Thank you for purchasing our products.
To guarantee your rights, please fill in this form properly,
thank you!

Name	
Address	
Telephone	
Invoice number	
Purchase date	
Item number	
dealers	! Note: this field requires the dealers seal!

Warning: please keep this warranty paper for repair presentation.


Attention:

- Do not Self-disassemble the product, to avoid any electric shock.
- Please use vender's specified adapter and power socket, to maintain normal working.
- Please do not over-adjusting the joint activity parts, to avoid any damage to the lamp.
- Please do not use the lamp in high-temperature or high-humidity environment.
- Please don't look at the LED lightsouce straightly, to avoid your eyes hurt.
- In case below conditions occur, please pull out the power cord, stop using (if needed, please call for help):
 - * The power cord or power plug break
 - * The lamp holder damp or rain
 - * The shell and joint activities of the lamp holder breaks
 - * The lamp holder smokes or sparks
 - * The abnormal flickering or break of the LED light bulb

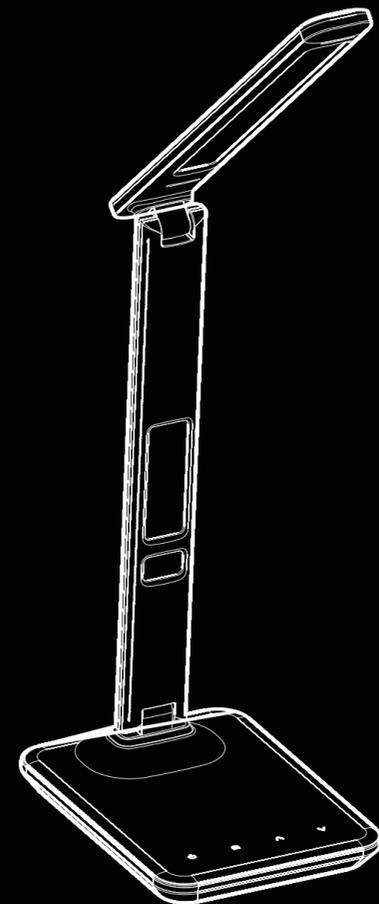


INSTRUCTION MANUAL

REPLACEMENT BATTERY




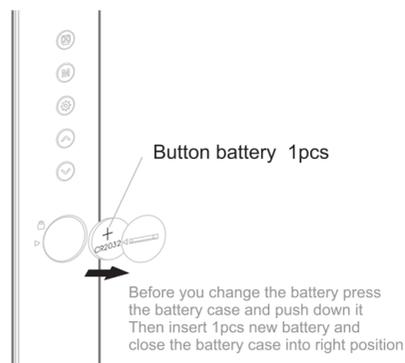


DISPLAY SCREEN BRIGHTNESS ADJUSTMENT

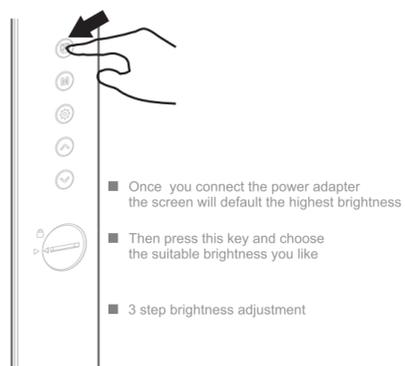

USER INSTRUCTION

Please insert the DC connector into the the DC Jack of the base

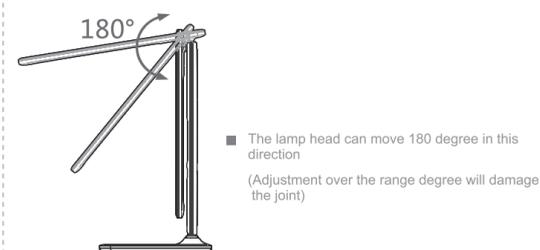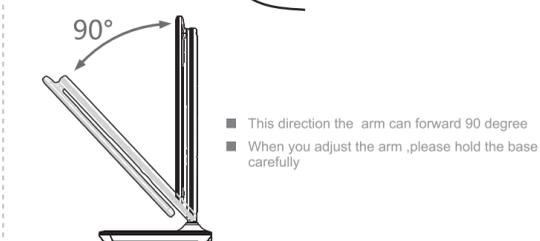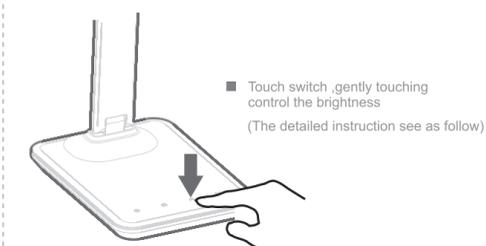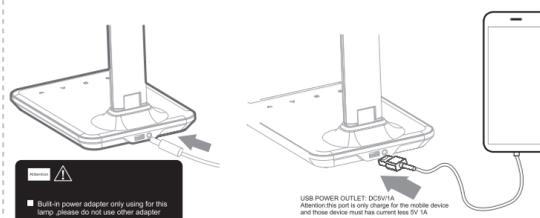

OPERATION GUIDE

- Touch switch operation :(see the drawing)



- Calendar and alarm setting



- Date and Time setting

- 1.In normal mode,press "set" key to achieve setting functions, press against to move next, sequence:

Hour-Minute-Year-Month-Day.
2. Press "up" and "down" to setting, week changes automatically when date change.
3. In setting mode,press mode or stop operation in one munite to exit setting, and display time.
4. In normal mode, press "down" key to switch between"12H"or"24H" display.

- Snooze function setting

1. In normal mode, press "mode" key to active alarm setting.
2. In alarm mode, press "set" key to set the alarm time, sequence:

Hour-Munite-Snooze-Music-Exit.
3. Press "up"and"down"to setting
4. In alarm mode, press "up" and "down" to turn on/off alarm and snooze function, press again to achieve next function, sequence: alarm on- snooze on-alarm off-snooze off
5. When come to alarm time, will ring 1 munite, then snooze and ring again. Press any key to off alarm.

- Temperature switch

In normal mode, press "down" key to switch between "F" and "C" display.